




ClearView
GLASS RAILINGS

INSTALLATION

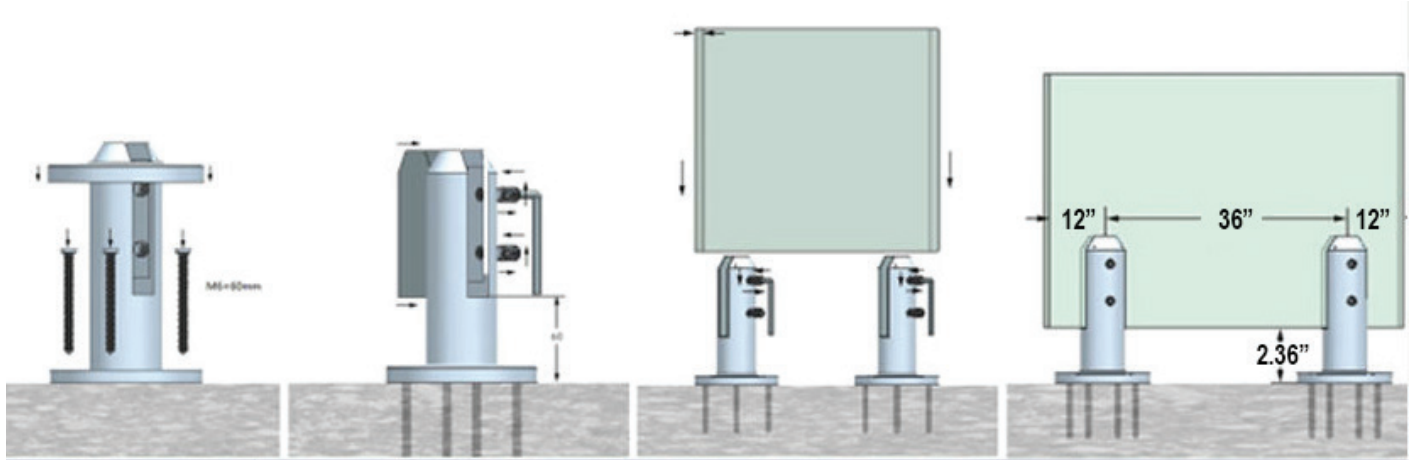

Part Number	CVGR 316 SSOD48-180 Satin Finish
Product Name	Round Deck Mount Spigot
Spigot Size	1.9" diameter x 7.1" tall
Spigot Weight	5.5 lbs.
Glass Thickness/ Dimensions/Weight (per panel)	1/2" / 60" width x 39.37" height/98.5 lbs.
Accessories Included	Base Cover, Rubber Gasket

Wood Deck Installation

We suggest using 3/8" diameter x 3.5" long lag bolts with flat washer to fasten spigots to wood deck. Lag bolts and washer should be cadmium plated or stainless steel so they do not rust.

Lag bolts must be installed into rim joists or lam beam or properly blocked sub structure. If lag bolts are attached to deck planks only failure will occur as a result of improper installation. Improper installation and failure may result in injuries or death. Do it once and do it right!

Helpful Installation Tips

- Apply a bit of talcum powder to the inside of the spigot rubber boot to help the glass slide in the rubber boot, not grab the rubber boot.
- Mark spigot location on glass panels with a crayon or wax marker. This allows for fast and easier installation of panel in proper location.
- Some clients have suggested screwing the rim joist to the joist as the screws will hold the rim joist tight to the joist where as nails may not.